



声乐玩具
SHENGLE TOYS



MQ-6115

61键多功能音乐电子琴 使用说明书

61keys musical electronic keyboard instructions



12 学习功能 LEARN MODE

1.按"FOLLOW"或"OKON"教学键,进入教学模式。(图15)

2.按键盘上的任意白键启动功能后,在键盘上学习弹奏。

● 要在任何时候停止学习,按"STOP"键即可。

1.Press "FOLLOW" or "OKON" learning button to enter the learning mode. (photo 15)

2.Press the white key to start playing.

● Press "STOP" to stop learning.

13 附录 ADDENDUM

歌曲列表

Song List:



- | | |
|---------|------------------------------|
| 1.喜洋洋 | (Beaming with joy) |
| 2.为了谁 | For whom |
| 3.久久艳阳天 | Bring Spring Day |
| 4.凤阳花鼓 | Fengyang Flower Drum |
| 5.常回家看看 | Often go home see see |
| 6.步步高 | Attain Eminence Step By step |

音色列表: TONE LIST

- | | |
|---------|-----------|
| 00 钢琴 | Piano |
| 01 竖琴 | Harp |
| 02 风琴 | Organ |
| 03 铃 | Bell |
| 04 爵士吉他 | J-Guitar |
| 05 小提琴 | Violin |
| 06 弦乐 | String1 |
| 07 吉他 | Guitar |
| 08 小号 | Trumpet |
| 09 大号 | Tuba |
| 10 贝斯 | Bass |
| 11 萨克斯风 | Saxophone |
| 12 长笛 | Flute |
| 13 斑鸠琴 | Banjo |
| 14 双簧管 | Oboe |
| 15 英国号 | Horn |

节奏列表: RHYTHM LIST

- | | |
|-----------|------------|
| RHY1 迪斯科 | DISCO |
| RHY2 舞曲 | DANCE |
| RHY3 放克 | FUNK |
| RHY4 叙事曲 | BALLAD |
| RHY5 爵士乐 | FUSION |
| RHY6 波萨诺瓦 | BOSSA NOVA |
| RHY7 恰恰 | CHA-CHA |
| RHY8 华尔兹 | WALTZ |
| RHY9 进行曲 | MARCH |
| RHY10 波卡 | POLKA |

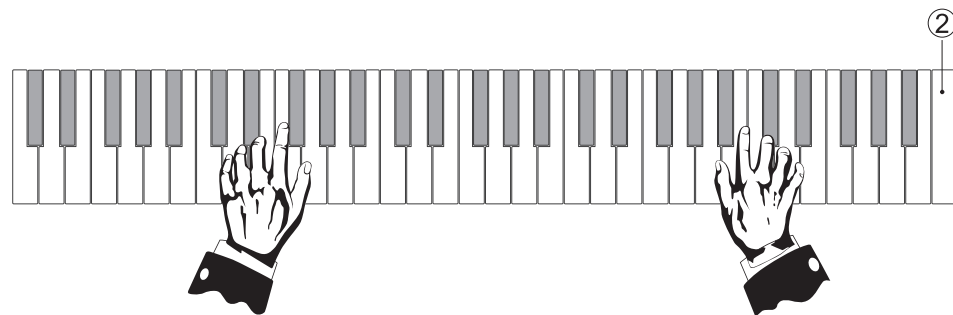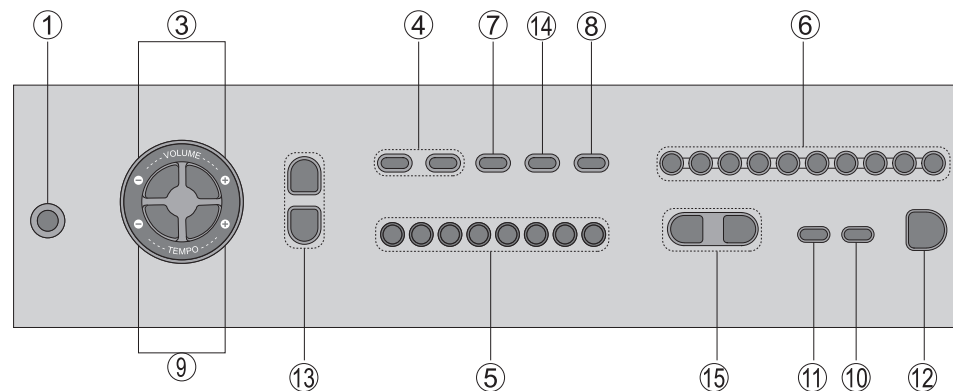

- | | |
|---------|--------------------|
| ① 电源开关 | POWER |
| ② 键盘 | KEYBOARD |
| ③ 音量+ | VOLUME + - |
| ④ 音色A/B | TONE A/B |
| ⑤ 鼓组合 | DRUM COMBINATION |
| ⑥ 节奏组合 | RHYTHM COMBINATION |
| ⑦ 间奏插入 | FILL-IN |
| ⑧ 停止 | STOP |

- | | |
|---------|---------|
| ⑨ 节拍速度 | TEMPO |
| ⑩ 音符录音 | RECORD |
| ⑪ 打击乐编程 | PROG |
| ⑫ 播放/音效 | PLAY/SE |
| ⑬ 和弦 | CHORD |
| ⑭ 乐曲 | DEMO |
| ⑮ 学习功能 | OKON |

1 电源 POWER

将"POWER"电源开启,即可弹奏"键盘",进入演奏状态。(图1/2)
Power→on: into play "keyboard" mode(photo1/2)

2 音量调节 VOLUME

用"VOLUME +- "调节键增大或减小总音量。(图3)
Using "volume +- " up or down the volume(photo3)

3 乐器音色选择 TONE

1.按"TONE A/B"键,可循环选取"0-7"与"8-15"音色。(图4)
1.Press "TONE A/B" to select Tone "0-7" and "8-15".(photo 4)

4 节奏播放选择 RHYTHM

1.按"RHYTHM COMBINATION"键,直接选取节奏。(图6)
2.按"FILL-IN"键,可为正在播放的节奏插入一段过渡间奏。(图7)
3.要停止节奏播放,按"STOP"停止键即可。(图8)

1.Press "RHYTHM COMBINATION" to select Rhythm. (photo6)
2.Press "FILL-IN" to insert a transition music for playing Rhythm.(photo 7)
3.Press "STOP" to stop Rhythm playing.(photo 8)

5 节拍速度调节 TEMPO

用"TEMPO +- "调节键加快或减慢节拍速度。(图9)
Press "Tempo+- " to fast or slow the Tempo.(photo9)

6 打击乐器 DRUM

按"DRUM COMBINATION"发出8种对应的鼓声。(图5)
PRESS "DRUM COMBINATION" to play 8 kinds drums(photo 5)

7 音符录音 RECORD

1.按"RECORD"键进入录音模式,再弹奏键盘进行录制。(图10)
2.按"PLAY/SE"键可播放出所录制的音阶。(图12)
● 按"STOP"键关闭此模式。

1.Press "RECORD" into record mode,then press keyboard to start recording.(Photo10)
2.Press "PLAY/SE" to play the recorded Tone. (photo12)
● Press "STOP" to close the mode.

8 节奏编程 PROG

1.按"PROG"键进入编程模式,再按"DRUM COMBINATION"鼓组键进行录制。(图11)
2.按"PLAY/SE"键可播放出所录制的鼓声。(图12)
● 按"STOP"键关闭此模式。

1.Press "PROG" into program mode,then press "DRUM COMBINATION" to start recording.(photo11)
2.Press "PLAY/SE" to play the recorded Drum. (photo12)
● Press "STOP" to close the mode.

9 音效控制 SOUND EFFECT

本电子琴共有3种弹奏键盘的音效控制,模拟声场效果。按"PLAY/SE"键进入第一种音效状态,再按则切换成另一种,依此循环。(图12)
● 此功能在录音或编程模式下不可用。

The piano has 3 sound effects of playing keyboard ,it will used sound field simulation.press "PLAY/SE" into the first sound,press again change another, and so on(photo 12)
● The function doesn't work under Record or Program mode.

10 使用和弦伴奏 CHORD

本电子琴有单指和弦及多指和弦自动伴奏系统,在开始之前,您应首先选择要使用的节奏,并设定速度值。

1.按"RHYTHM COMBINATION"键选取要播放的节奏。(图6)
2.按"SINGLE"单指、或"FINGER"多指和弦键,进入状态。(图13)
3.在"键盘"左边和弦键区按不同的指法进行不同的演奏。(图2)

The keyboard insert single and Finger Chord system.You should select the Rhythm before using it.and settings speed value.

1.To select the Rhythm what you want to play by press "Rhythm Combination" btn. (photo6)
2.Into Chord Mode by press "SINGLE" or "FINGER" btn.(photo13)
3.play different music by press the left Chord area of "keyboard".(photo2)

11 播放内置乐曲 DEMO

按"DEMO"键直接播放内置乐曲。(图14)
● 要停止乐曲播放,按"STOP"停止键即可。
Press "DEMO" to play music.(photo14)
● Press "STOP" to stop music.