Wireless Audio Baby Monitor



User's Manual



9. Loudspeaker

10. Nightlight


11. Code switch


• Press the pair code key at the same time for the receiver and transmitter, the red light will flash quickly. After pairing, The light is no longer flashing.

2. Battery compartment

 $\bullet \text{Need 3}$ pcs AA Dry Battery. (To prevent accidents, the power adapter cannot charge the battery.)

B.Receiver Key Function Illustration

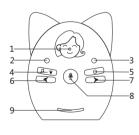

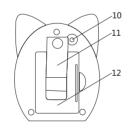

1.Microphone

2.Power/Pair indicator light: functions as below:

- •Red indicator led light is on: Power plugs supply the power or battery supply the power normally.
- $\bullet \mbox{Red}$ indicator led flash slowly: No signal or no pair.
- $\bullet \text{Red}$ indicator led flash quickly: Pairing code state: After pairing code, the light is no longer flashing.

3.Low/Nightlight indicator light

- $\bullet {\sf Red \ indicator \ led \ flash \ slowly: \ Low \ battery \ voltage, Please \ change \ battery. }$
- •Red indicator led long light on: Indicates that the transmitter's nightlight is on.

4.Music/Nightlight switch

- •Short press for switch on/off music
- •Long press for switch on/off nightlight.

5.Power switch

Long press for switch on/Switch off
 6.Sound volume -

•Turn down the volume. 7.Sound volume +


•Increase the volume.

1. Main Features

- •Adopt frequency hopping spread spectrum(FHSS),Anti-interference and sound clarity
- •Work Frequency Band: 900MHZ ISM,905—925MHZ
- •Long distance transmission 200-300 meters in the open field
- Transmitter and Receiver need making pairing code before any operation, Confidentiality is strong
- •With 2-way talk, music and nightlight function
- When there is without any sound from Transmitter within 20 seconds, the receiver will be in mute state.

2. Key Function Illustration

A. Transmitter Key Function Illustration

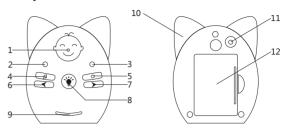

1.Microphone

2.Power/Pair indicator light: functions as below:

- •Red indicator led light is on: Power plugs supply the power or battery supply the power normally.
- •Red indicator led flash slowly: No signal or no pair.
- Red indicator led flash quickly: Pairing code state; After pairing code, the light is no longer flashing

3.Low indicator light

•Red indicator led flash slowly: Low battery voltage,Please change battery.

4. Music switch

•Short press for switch on/off music.

5. Power switch

•Long press for switch on/Switch off.

6. Sound volume -

•Turn down the volume

7. Sound volume +

•Increase the volume.

8. Light switch

•Short press for switch on/off nightlight.

1

8.2-way talk

•press on the receiver to talk to the transmitter, loose the button to hear the sound from transmitter.

9.Loudspeaker

10.Pair code switch

• Press the pair code key at the same time for the receiver and transmitter, the red light will flash quickly. After pairing, The light is no longer flashing.

11.Pocket Clip

12.Battery compartment

• Need 3 pcs AA Dry Battery. (To prevent accidents, the power adapter cannot charge the battery.)

3.Instructions

A.Total volume grade is 10

- Press VOL+ key to increase the volume, it appear have "beep" sound when the volume is adjusted to the maximum, it means the volume is already the maximum.
- Press VOL- to turn down the volume, it appear have "beep" sound when the volume is adjusted to the minimum, it means the volume is already the minimum.

B.Mute function

•When there is without any sound from Transmitter within 20 seconds, the receiver will be in mute state.

4.Parameters

Operating frequency:	ISM 905-925MHz
Transmission power :	10 dBm
Modulation mode :	FSK
Spread spectrum method :	FHHS
Audio encoding :	ADPCM
Modulation frequency:	180 KHz
Code rate:	500 Kbps
Receiver sensitivity:	≦-92 dBm
Power supply mode :	5V USB or 3pcs AA dry battery
Transmitter operating current :	180 mA MAX (all open)
Transmitter standby current :	75 mA MAX
Receiver operating current :	75 mA MAX
Battery specifications :	3pcs 1.2V AA dry battery
Operating Temperature :	0°C-50°C