



Thank you sincerely for buying our hand roll piano. We are specialized in developed and manufactured hand roll piano and drum kit for over 15years. This hand roll piano is a handy size product which very easy to carry, in order to have a best experience effect, please pay attention to the operation, with you enjoy it, thanks again for your cooperation!

**I Main Feature**

- 6188 Keys standard piano.
- Auto sleep mode.
- 128 kinds of tone, 128 kinds of rhythms and 14 demo songs.
- Mode selection key (tone and rhythm).
- Recording, programming and playback function.
- Demo songs play, tutorial function.
- Start/stop insert function key.
- Piano/Drum kit function.

Sustain and vibrato function  
Master volume control key tempo control key  
MIDI Out/USB SV power adapter  
Earphone/speaker output interface.  
Power supply  
1 by USB SV power adapter.  
2 by built in 1100mAh ion battery.  
3 by 4 AAA battery (Built-in lithium battery without AAA battery compartments)

**II Icons specification of panel function**

**III Product Function description**

**1. Tone**

- Include 128 tones.
- The initial settings for this tone number is "000", press "Tone+ /Tone-" to choose what you like.

**2. Rhythm**

- Include 128 rhythms.
- When you press "RHY" the piano will automatically enter into the playback mode, LCD with number "000", press "RHY" again, the rhythm will stop.
- You can use "RHY+ /RHY-" to control rhythm.
- The user can press "insert" to insert 1/2 sets at the basic rhythm when it is in rhythm mode.

**3. Demo**

- 14 demo songs.
- Try to press "Demo", will automatically play demo songs, and initial number is "001", press the button "Demo" again, you could cycle del the demo songs.
- The user could play piano with demo songs.

**4. Tutorial**

- Press the "Tutorial" to enter into the function.

**5. Record/Play**

- Press "REC" when it indicate "REC" at LED display, you can record now.
- Press "Play" button, LED display "REP".
- You can press the button "Play" to show what you had record just now, and will continue for only one time.
- When it is in "REP" mode, user could press "Play" button to stop it.
- If you need record again, every settings will be back to initial.

1	LED	LED display	16	Piano	Piano
2	Tone+	Tone	17	Tutorial	Tutorial
3	Tone+	Tone+	18	Tempo Control	Tempo Control
4	RHY+	RHY-	19	Volume Control	Volume Control
5	RHY+	RHY+	20	Power Switch	Power Switch
6	REC	Record	21	LED indicator	LED indicator
7	▶	Play	22	Headphone/Speaker interface	Headphone/Speaker interface
8	⏸	Metronome	23	Sustain input interface	Sustain input interface
9	Demo	Demo	24	MIDI OUT/USB SV	MIDI OUT/USB SV
10	Program	Program	25	MIDI Output interface	MIDI Output interface
11	▶/⏸	Start/Stop	26	Power interface	Power interface
12	Drum Kit	Drum Kit	27	Finger	Finger
13	Insert	Insert	28	Single	Single
14	Sustain	Sustain	29	Single	Single
15	Vibrato	Vibrato	30	Finger	Finger

**IV Accessory one-lists of tone**

Tone Number	Name	Tone Number	Name
T00	Piano 1	T36	Slap Bass 1
T01	Piano 2	T37	Slap Bass 2
T02	Piano 3	T38	Synth Bass 1
T03	Honky-Tonk Piano	T39	Synth Bass 2
T04	Rhodes Piano	T40	Violin
T05	Chorus Piano	T41	Viola
T06	Harpichord	T42	Cello
T07	Clavinet	T43	Contrabass
T08	Calaisa	T44	Tremolo Strings
T09	Glockenspiel	T45	Pizzicato Strings
T10	Music Box	T46	Orchestral Harp
T11	Vibraphone	T47	Timpani
T12	Marmba	T48	String Ensemble 1
T13	Xylophone	T49	String Ensemble 2
T14	Tubular Bells	T50	SynthStrings 1
T15	Santur	T51	SynthStrings 2
T16	Hammond Organ	T52	Choir Aahs
T17	Percussion Organ	T53	Voice Oohs
T18	Rock Organ	T54	Synth Voice
T19	Church Organ	T55	Orchestra Hit
T20	Reed Organ	T56	Trumpet
T21	Accordion	T57	Drumset
T22	Harmonica	T58	Brush Noise
T23	Banjo	T59	Tuba
T24	Acoustic Guitar (nylon)	T60	Muted Trumpet
T25	Acoustic Guitar (steel)	T61	French Horn
T26	Electric Guitar (Jazz)	T62	Synth Brass 1
T27	Electric Guitar (clean)	T63	Synth Brass 2
T28	Electric Guitar (muted)	T64	Soprano Sax
T29	Overdriven Guitar	T65	Alto Sax
T30	Distortion Guitar	T66	Tenor Sax
T31	Guitar Harmonics	T67	Baritone Sax
T32	Acoustic Bass	T68	Oboe
T33	Electric Bass (finger)	T69	English Horn
T34	Electric Bass (pick)		

**5. Program**

- Automatically records rhythm and edit your beats when press button "Program".
- Press "▶" program function stopped and play your beats which you have just now.
- Press "▶" to stop playing beats.

**7. Volume**

- Using "T / V" to control volume which you need, the initial setting is level 12, and the MAX volume is level 12.

**8. Vibrato**

- Press "Vibrato" to star this function, and press it again, function stopped.

**9. Sustain**

- Press "Sustain" to start this function, and press it again, function stopped.

**10. Drum kit**

- Press "Drum Kit", all the sounds will change into percussion sound, and stop it when you press it again.

**11. Single/fingered chord**

- Press "Single" button, LED display "ON" to enter single/fingered mode, then press "▶" button, LED display "000", press "Single" button to start single chord, LED display "001", or press "Fingered" button to start fingered chord, LED display "002", user can play 14 white keys and 10 black keys on the base. (8 keys can choose 5 white keys and 3 black keys in the base) Press "▶" button to stop.
- User can choose different rhythm with single/fingered.

**12. Tempo**

- Press "Temp" to turn up and slow down the tempo.

**13. Metronome function**

- Metronome function control, press twice, function stop.

**14. Sleep function**

- It will enter into auto stand-by and sleep mode if there is no action after 1 minute, press any key can wake up it.

**15. LED indicator**

- Red LED light is power indicator, Press "▶" button to light on the power indicator and display screen, LED indicator light on or auto sleep mode. Reverse "▶" button, red indicator and display screen light off.
- Green LED light is charging indicator, connect USB SV adapter to power the built-in ion battery when the battery is lack of power. When green indicator light off it means the battery is fully charged.

**16. Power ON/OFF button**

- First press "ON" to open. Second press of this button "OFF" to close.

Attention: please insert the USB cable to supply the power in the first time, meanwhile it can be used normally and charging for the battery inside.

**V Accessory two-lists of rhythm**

Rhythm Number	Name	Rhythm Number	Name
R00	Beguinesswing	R35	Country1&T
R01	Beguine1	R36	Tango1
R02	Beguine2	R37	Tango2
R03	Pophit	R38	Polka 1
R04	Pop	R39	Polka 2
R05	Popmelay	R40	Popswing
R06	Bosanova	R41	Easyswing
R07	Disco 1	R42	Softswing
R08	Disco 2	R43	Rock 1
R09	Bluesgrassdisco	R44	Rock 2
R10	Waltz 1	R45	Rock 3
R11	Waltz 2	R46	Airtrock
R12	Trueballadwaltz	R47	Heartrock
R13	Boiswaltz	R48	Rockroll
R14	Easyswaltz	R49	Urban
R15	Shufflewaltz	R50	Ballad
R16	Reggaewaltz	R51	Jazzballad
R17	Lead 1 (calliope lead)	R52	C. Band
R18	Lead 2 (square)	R53	4/4 Ballad
R19	Lead 3 (voice)	R54	6/8(Slowballad)
R20	Lead 4 (choir)	R55	PianoBallad
R21	Lead 5 (metallic)	R56	SOBallad
R22	Lead 6 (sweep)	R57	Shakelap
R23	FX 1 (rain)	R58	Hippoblasts
R24	FX 2 (counttrack)	R59	Outblasts
R25	FX 3 (crystal)	R60	Blugrass
R26		R61	Boogie 1
R27		R62	Boogie 2
R28		R63	Boogie 3
R29		R64	Shuffle 1
R30		R65	Shuffle 2
R31		R66	DiscoShuffle
R32		R67	CountryShuffle
R33		R68	QuickShuffle
R34		R69	ReggaeShuffle

**VI Accessory three-name lists of demo**

Demo Number	Name	Demo Number	Name
D00	Lily-mel	D07	Main Song
D01	Winter Sonata	D08	Childhood Memory
D02	Kiyomi_Cutie Song	D09	Come into my dream
D03	Beautiful Jazz	D10	Violin Humoresque
D04	Forever Mist-Neptun	D11	Showdreams
D05	Dixsony	D12	Dance of Trefle
D06	Pokey of the Bird	D13	My Soul

**VII Maintenance of hand-roll piano**

1. The hand-roll piano can be clean with soft and clean towel.
2. It should be rolled well after use.
3. Do not put the piano in hot and humid place.

**VIII Instruction for the use of hand-roll piano**

- The piano cannot be rolled too tight when putting it away, in case the normal function of the key is damaged and the product life is shortened.
- Do not pull or twist the keyboard of the piano.
- Do not put the piano in the hot and humid place.
- Cannot split any part of the piano.
- Cannot put the piano in the place with strong wave, in case some function is damaged.

**IX Trouble shooting**

- If the sound is abnormal or the piano key is invalid, please press "O" to turn off, then press "O" again to restore the original setting.