Sinilink XY-WRCU Smart remote control



contents

contents	2
1. Product Parameter	3
2. Device networking tutorial	4
2.1 Network indicator function introduction	4
2.2 How to enter the pairing state	4
2.3 Touch Pair	5
2.4 AP Pair	6
3.Frequency settings	7
4.Key Learning	7
5.APP Interface function description	8
5.1 Block button function	8
5.2 Support for timing time delay cycle function	8
5.3 Key learning status	8
5. 4 Share Settings	9
5.5 operating record	9
6.Mail notification function:	10
6.1 How to bind a mailbox	10
7.How to download a mobile APP	11

1. Product Parameter



- 1) Power supply voltage: 5V DC;
- 2) Network mode: 2.4G WiFi
- 3) Working distance:> 50m;
- 4) RF Frequency / RF:310,315,330,350,390,418,430,433,580Mhz (OOK);

2. Device networking tutorial

2.1 Network indicator function introduction

Red indicator light: Network status indicator lamp

1. not connected router: bright 1S out 0.1S so reciprocating;

2. link router but not connected: flash once, flash once so repeated;

3. Touch pairing mode: quickly flash 4 consecutive times and then wait for 1S to reciprocate;

4. AP pairing mode: red light keeps flash;

5. networking success: the red indicator light is always on;

2.2 How to enter the pairing state

After the product is electrized, the UP and STOP keys are pressed simultaneously until the product red indicates section 2.1 (Touch and AP pairing mode) mode flashes



2.3 Touch Pair

Get the product into Touch pairing (red flash flash 1 second apart)
 APP operation is shown in Fig:



	Next step		
	Fourth step		
< ^	ন⊫ ক ⊮ Connected Device	Þ	
1 Enter passw	WIFI Input device Connection completed Explain		The product enters Touch
Press the four tim	matching button for a long time until the indicator flas es and then interrupts for one second (as shown below when the device enters Touch matching mode.	hes v),	<u>by default after power-on</u> <u>Pairing mode.</u>
	Cot item Istom device name		
Cu			Customize device name and
Cu Inps	ut device name		classification.
Cu Inpo	ut device name		
Cu Inpu Pie	ut device name ease choose device classification ease choose device classification		
Cu Inpv Pie	ut device name ease choose device classification ase choose device classification v		
Cu Inpv Pik	ut device name ease choose device classification		
Cu Inpv Pie	ut device name ease choose device classification ase choose device classification		
Pite	ut device name ease choose device classification ase choose device classification 🗸		

2.4 AP Pair

- 1. lets product into AP pairing (red indicator constant flash)
- 2. APP operation is shown in Fig:



	C Add Device
	 Press the matching button for a long time until the indicator flashes continuously (as shown below), when the device enters compatible matching mode.
WLAN 🔍	2. Enter the mobile setup interface and connect the
Saved	network to the Sinilink Product network (password 12345678)
SinilinkProduct	
Connected	
TP-LINK_2.4G_xinyi	WIRK
Available network	WAN THENRIPH S
रू Asfly	0 X4506
🗟 AsHobby	🔷 +ARA 💛
CAR-DVR-e912	 Экккие Эккие Эккие
	anteres at
Setting	
	171(245/202)
Enter the phone setting interface	TPULKKUPN
and connect the WIF1 network to SinilinkProduct (password is	EnderProduct (1985-3081-0240)
12345678)	Go back to Sinilink APP and click "Next"
	Next step
Seventh step	
Seventh step এল কে এল এল এল এল এল বিশ্ব - Add Device	
Seventh step 14PM 24 🖘 54 54 62 48) - Add Device	
Seventh step	
Seventh step 14 PM 24 ॡ 5 64 64 € Add Device	
Seventh step	
Seventh step	
Seventh step	Click "Finish adding" ar
Seventh step	<u>Click "Finish adding" ar</u> waitfor the mobile phone
Seventh step	<u>Click "Finish adding" ar</u> waitfor the mobile phone to connect successfully,
Seventh step	Click "Finish adding" ar waitfor the mobile phone to connect successfully, and then automatically
Seventh step	Click "Finish adding" ar waitfor the mobile phone to connect successfully, and then automatically return to the app device
Seventh step	Click "Finish adding" an waitfor the mobile phone to connect successfully, and then automatically return to the app device interface
	Click "Finish adding" ar waitfor the mobile phone to connect successfully, and then automatically return to the app device interface
	Click "Finish adding" ar waitfor the mobile phone to connect successfully, and then automatically return to the app device interface
	Click "Finish adding" ar waitfor the mobile phone to connect successfully, and then automatically return to the app device interface
	Click "Finish adding" ar waitfor the mobile phone to connect successfully, and then automatically return to the app device interface
	Click "Finish adding" ar waitfor the mobile phone to connect successfully, and then automatically return to the app device interface
<section-header></section-header>	Click "Finish adding" ar waitfor the mobile phone to connect successfully, and then automatically return to the app device interface

3.Frequency settings

1. The factory is set to 433Mhz, as skipped if your original remote handle is 433Mhz;

2. frequency setting method: Enter the same frequency as the original remote controller handle in the (Figure 2) position;



3.Click to confirm to complete the configuration;

4.Key Learning

1. First, press the UP and DOWN until the product green indicator can flash



2. Hold the product closely with the remote control to be learned (remote left, product right as shown lelow);



3.can first press the UP key of the product, and then press the corresponding button that the remote control needs to learn until the product green indicator flashes;4. learns the STOP and DOWN keys, please refer to the method in steps 2,3;

5.APP Interface function description



5.1 Block button function

After this function is turned on, instructions cannot be sent through the product key, only through the app;

5.2 Support for timing | time delay | cycle function

Functions can be added such as timing, delay, cycle and so on through app, which can meet the scene needs of timing on, off and cycle test;

5.3 Key learning status

The App displays the learning status of the three UP STOP DOWN keys, black if completed, otherwise gray; instructions can only be sent normally; If you want to learn a key separately, you can long press the keys needed to learn at the APP remote control interface until you enter the learning key interface;



5. 4 Share Settings

Can be shared with others, to realize multiple people to share a device, can control its functions.

5.5 operating record

You can store all operation records in the background, timer + button + APP to facilitate query and control records;



Note: cloud records can be kept for up to 15 days

Serial	Time	Execute
KEY	2021-11-03 14:54:40	ON
APP	2021-10-30 07:44:25	ON
APP	2021-10-29 21:19:56	OFF
APP	2021-10-29 21:19:51	ON
APP	2021-10-29 19:46:36	ON
APP	2021-10-29 10:58:40	ON
APP	2021-10-29 09:15:50	ON
APP	2021-10-28 23:07:15	ON
APP	2021-10-28 20:07:27	ON
APP	2021-10-28 19:19:57	ON
APP	2021-10-28 13:43:56	ON
APP	2021-10-28 10:31:28	ON
APP	2021-10-28 10:31:24	ON

APP	2021-10-28 10:30:24	ON
APP	2021-10-28 10:29:57	ON
APP	2021-10-28 10:28:52	ON
APP	2021-10-28 09:16:43	ON
APP	2021-10-21 19:37:37	OFF
APP	2021-10-21 19:37:34	ON
APP	2021-10-21 19:37:31	STOP

6.Mail notification function:

6.1 How to bind a mailbox

1) Turn on the mail notification



1. Open the APP into the device operation interface, the top left corner is the switch of the mail notification function; if the email notification is turned on, when the computer status sends the change will send the latest status and operation type of the computer in real time through the mailbox used to register the APP;

Operation types are divided into five types: 1. Equipment power 2. Key operation 3. Timer operation 4.APP operation 5. Point operation operation; as shown in the figure below



Sinilink Notice: Your Device [Sinilink] now status is power on,oprete type:



Sinilink Notice: Your Device [Sinilink] now status is power off,oprete type:

7.How to download a mobile APP



Scan the code to download the APP, foreign customers please download in the Google market, search for 'sinilink' download